



Wireless Portable Drive User Manual



Quick Start References

- Battery factory prior to part of the charge only for detection. It is recommended to use after the battery fully charged.
- Press power button to enable USB Drive function when connected with PC.
- Power off automatically after 10 minutes of inactivity to save energy.
- Charge SmartBox Battery Solid RED
SmartBox charge complete When Power Off Solid Purple
SmartBox charging phone (WiFi turn off) Extinguish

Package Contents

SmartBox	1 pc
microSD	1 pc
microSD Adapter	1 pc
USB Cable	1 pc
User Manual	1 sheet

Caution

- Observe the following cautions carefully to avoid damage, fire, or burst of the product:
 - Do not attempt to disassemble, modify or repair the product by yourself.
 - Do not drop or hit this product. Doing so may damage the product.
 - Do not expose the product to any of the following environments:
 - In a dusty place
 - In a car exposed to sunlight, a place exposed to direct sunlight, or a place that becomes hot
 - In a moist place or a place where condensation may occur
 - In a place where a magnetic field is generated


1 Year Global Warranty

Return Merchandise / Quality Assurance	
Taiwan 12F-3, No. 100, Sec.1, Jiafong 11th Road, Zhubei City, Hsinchu County 302, Taiwan, R.O.C Tel+886-3-6675098 #209 or #225	China Room 811, China Academy of Science & Technology Development Incubator Building, High-Tech South 1st Rd., NanShan Dist., Shen Zhen, China Tel: +86-755-2693-5558 #807 or #809
Website www.gigastone.com.tw/smartbox	e-mail service@gigastone.com.tw

Certifications



Getting to know SmartBox

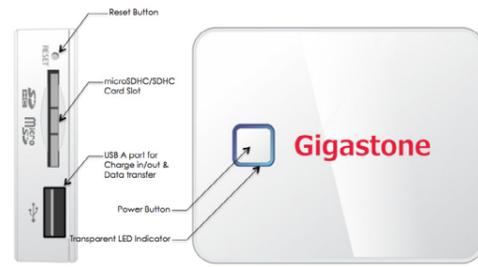

Product Specifications

Product Name		Gigastone SmartBox		
Part Number	SmartBox A1	SmartBox A2	SmartBox A3	
Dimension (mm)	75 x 60 x 11.5	75 x 60 x 16.1	75 x 60 x 22.2	
weight (g)	52	75	125	
Li-Ion Battery	1200mAh	2500mAh	5000mAh	
Charge In/Out	DC 5V / 500mA		DC 5V / 1000mA	
Storage Memory	SDHC card, up to 32GB			
USB Port	USB A for charge in/out and data			
Wireless I/F	Wi-Fi 802.11b/g/n			
WiFi Outreach	Approx. 10M			
WiFi Operation time	4Hr	8Hr	16Hr	
WiFi Standby time	8Hr	16Hr	32Hr	
Operation Temp.	-20°C ~ 60°C			
Charging Temp.	0°C ~ 45°C			

Product Features

Wireless Portable Drive	Wireless file server
	Wireless video/audio playback
	Support up to 6 devices simultaneously
USB mass storage	Wireless SD card reader
	USB pen drive
Portable Power Bank	USB SD card reader
	DC 5V/500mA or DC 5V/1000mA output

Support Media Type

Operating system	iOS	Android
Photo	JPG, JPEG, PNG, BMP	
Audio	MP3, WAV	
Video	MOV, M4V	MP4
Document	DOC, XLS, PPT, PDF, TXT	

LED Definition

Indication	SmartBox Status	LED Signal
Wi-Fi	Booting Up	Solid Blue LED
	Standby	Blue LED flashes every 2 second
	Transmitting	Blue LED flashes every 0.5 second
Battery	Low Power (<40%)	Red LED flashes every 3 second
	Low Power (<20%)	Solid Red LED
	Charging Battery	Low-Level ON/OFF 1sec/1sec Middle-Level ON/OFF 3sec/2sec High-Level ON/OFF 5sec/4sec
Charging	SmartBox Power Off	Solid Purple LED
	SmartBox Power On	Blue LED flashes (WiFi Active signal)

Connecting to a PC

1. Connect SmartBox to a PC.
2. Press power button to trigger card reader mode.
3. Wait 5 sec for PC to detect the disk drive.
4. Copy contents form PC to SmartBox.

Charging the Smart Phone


- SmartBox is power-off:
1. Plug smart phone to SmartBox
 2. Press SmartBox power button to charge phone

- SmartBox is power-on:
1. Plug smart phone to SmartBox
 2. SmartBox start charging phone
 3. SmartBox will turn off the WiFi automatically in 5 sec (Blue LED flashing signal off)



Access SmartBox Via Browsers

- Connecting to SmartBox over WiFi
- Open a web browser and type "192.168.1.2" or "gigastone.smartbox" in the URL field
- Open the web page to access the contents in SmartBox

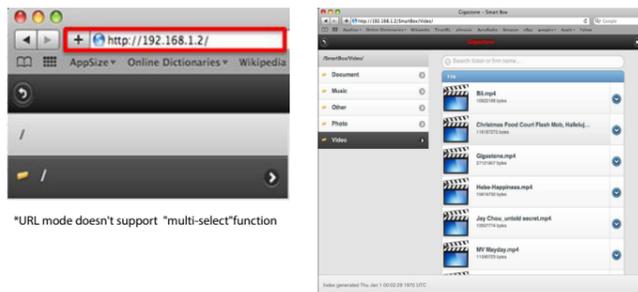

SmartBox App Installation and Settings

A Setup SmartBox App in iPhone

- > Scan QR code to get SmartBox App



- > Search SmartBox on App Store



Open the App Store.

Search for the Key words: **Gigastone**
Select Gigastone SmartBox app.

- Tap "INSTALL" button.

1 Connect to SmartBox over WiFi

Open WiFi network setting on iPhone.



Pick SmartBox (default) WiFi network to join. The default password: **123456789**

2 Launching the SmartBox App

Tap the SmartBox App icon on iPhone to launch.



SmartBox: Multimedia contents in SmartBox
Photo: Camera Roll & downloaded photos
Media: Downloaded Music & videos
Document: Downloaded Documents
Configuration: Configuring SmartBox

B Setup SmartBox App in Android

- > Scan QR code to get SmartBox App



- > Search SmartBox on Google Play



Open the Google Play.

Search for the Key words: **Gigastone**
Select Gigastone SmartBox app.

- Tap "Download" button.

1 Connect to SmartBox over WiFi

Open WiFi network setting on Android



Pick SmartBox (default) WiFi network to join. The default password: **123456789**

2 Launching the SmartBox App


Tap the SmartBox App icon on Android to launch



WiFi connection status:
WiFi not connected to SmartBox
WiFi connected to SmartBox
Home Button
SmartBox: Multimedia contents in SmartBox
Download: Downloaded contents
Local drive: Local contents on Android device
Settings: Configuring SmartBox & WiFi

3 Access media contents in SmartBox

Tap SmartBox icon access media contents in SmartBox

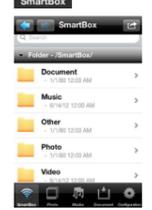

Function key
Search function
Document: Document types of files.
Music: Represents music or audio files.
Others: lists file types other than photo/image, music, video, and document.
Photo: Represents photo/image types of files.
Video: Represents video files.

3 Access media contents in SmartBox

Tap SmartBox icon access media contents in SmartBox

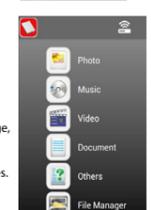


Photo: Photo/image types of files.
Music: Represents music or audio files.
Document: Downloaded Documents.
Others: Lists file types other than above.
File Manager: Acts as a file browser.

4 Configuring SmartBox and Its Status


Tap configuration icon to open the setting page.



WiFi connection status:
WiFi successfully connected
SD card status
Customize SmartBox SSID & password
Reboot the SmartBox
Reset SmartBox to default setting

4 Configuring SmartBox and Its Status

Tap configuration icon to open the setting page.

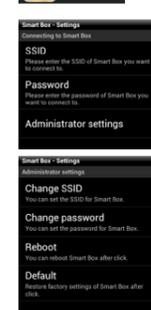

Key in the WiFi SSID of SmartBox
Key in the WiFi password of SmartBox
Enter Administrator Setting
Password: 0000
Set the WiFi SSID & password of SmartBox
Reboot the SmartBox
Reset SmartBox to default setting

Using SmartBox App

C Play Media Files in iPhone

- 1 Multi-select & advanced option

Tap

to call out function keys for further operations.



2 Photo

Tap to access photo in SmartBox.



Tap to call out function keys for download and slide mode.

3 Music

Tap access music in SmartBox.



Tap a music file to playback.
Repeat play
Repeat play off
Repeat play all
Repeat play selected one
Shuffle play
Shuffle play off
Shuffle play all

4 Video

Tap to access video in SmartBox.




Tap a video file to playback.
Repeat play
Repeat play off
Repeat play all
Shuffle play
Shuffle play off
Shuffle play all
*Shuffle Play option only enabled when play multiple files.

5 Upload Contents

Open folder in SmartBox app.

Tap button to select photos.

Tap to upload.

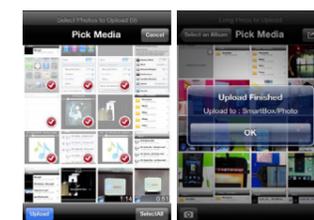

D Play Media Files in Android

- 1 Multi-select & advanced option

Tap

to call out function keys for further operations.



2 Photo


Tap to access photo in SmartBox.



Long press a thumbnail to download or delete.

3 Music

Tap access music in SmartBox.

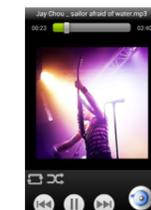

Tap a music file to playback.
Repeat play
Repeat play off
Repeat play all
Repeat play selected one
Shuffle play
Shuffle play off
Shuffle play all

4 Video

Tap access Video in SmartBox.



Tap a video file to playback.
Repeat play
Repeat play off
Repeat play all
Shuffle play
Shuffle play off
Shuffle play all

5 Upload Contents

Open Gallery in Android device.

Tap and pick

Select photos and tap to upload.

